


Canon Vixia R700/R800 Cheat Sheet

Zoom switch

Record Start/Stop button

The battery charging port is obscured under the grip on this side of the camera

Lens Cover Switch

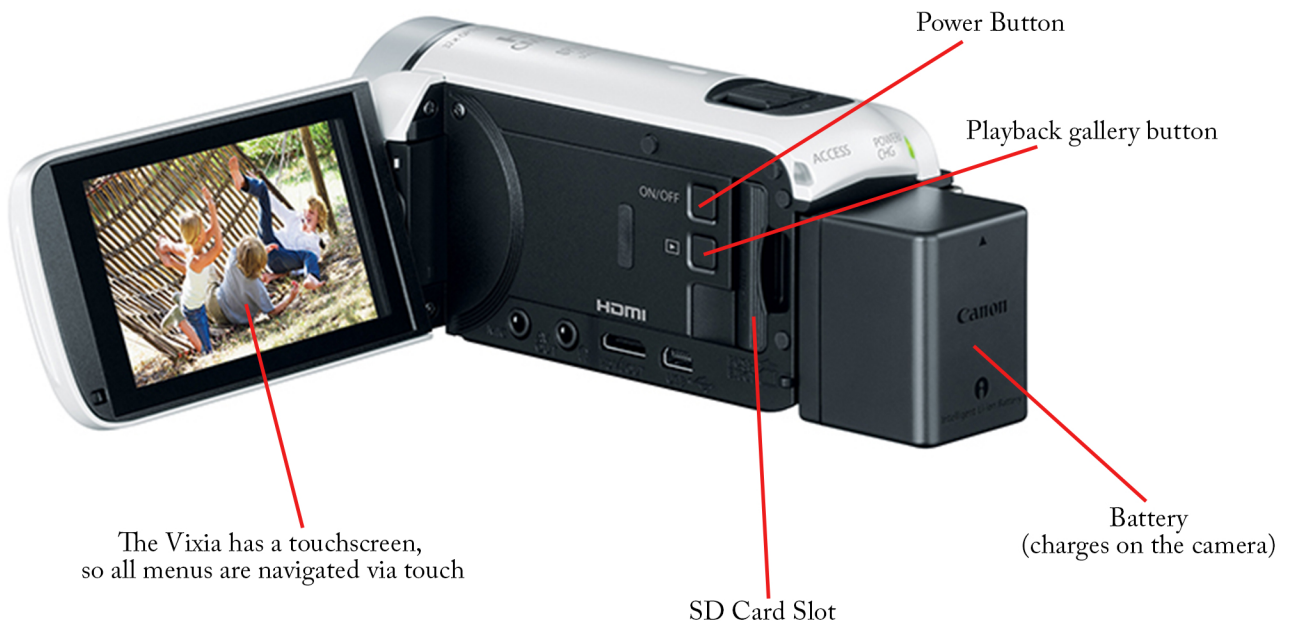

To format card, enter playback gallery and at the bottom press the edit button, then select "delete" and "all scenes"