

Zoom H4N Cheat Sheet

Internal mics can be rotated to change angle at which it will pick up sound

Check audio levels after pressing record button once

Top LED indicates using internal mics, Bottom 2 LEDs indicates using external input

Stop button to stop recording

Press record button once to start monitoring audio levels, then again to start recording



Playback volume adjust Power switch

Clickable scroll wheel for menu navigation

Change mic sensitivity for recording



SD card slot Menu button

Note: for formatting the SD Card, the path is Menu > SD Card > Format



Power slot to plug in AC adapter, we do not provide AA batteries

XLR and 1/4" inputs, note the 1/4" slot is in the center hole

