Setup

Mounting Sidearm onto Manfrotto Tripod



1. Open the Manfrotto tripod.



2. Note the fluid head tightening handle.



3. Unscrew the tightening handle to remove the fluid head. The fluid head will not be used but keep the tightening handle for setup on page 3.

Setup

Mounting Sidearm onto Manfrotto Tripod




4. Note the contents: sidearm, 3/8" thread bolt.



5. Note the sidearm has to ends. One end has a 3/8" thread and the other a 1/4" thread. Most equipment will screw directly onto the 1/4" thread.

Setup

Mounting Sidearm onto Manfrotto Tripod

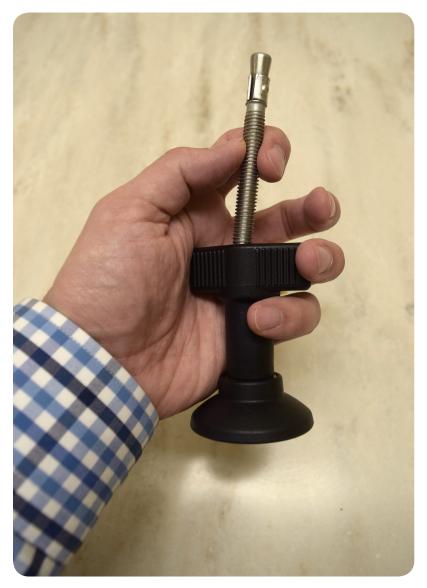

6. Insert the 3/8" thread bolt from the side arm package into the tightening handle from the Manfrotto tripod.



7. Screw the thread bolt all the way so that it protrudes from the bottom.

Assembly

Mounting Sidearm onto Manfrotto Tripod



8. Set the sidearm onto the tripod and screw in the tightening handle from the bottom.



9. Turn the sidearm to the desired location before tightening all the way.



10. Screw the camera or video camera directly onto the 1/4" thread.

Mounting Sidearm onto Manfrotto Tripod



11. Turn the lever on the sidearm to loosen the pole



12. Turn the pole to the desired angle and then tighten the lever.

Please remember to return all pieces back to place. Pay special attention to the 3/8" threaded bolt.