# Setup

## Mounting Sidearm onto Manfrotto Tripod



1. Open the Manfrotto tripod.



**2.** Note the fluid head tightening handle.



**3.** Unscrew the tightening handle to remove the fluid head.

## Setup

#### Mounting Sidearm onto Manfrotto Tripod



**4.** Note the contents: sidearm, 3/8" thread bolt.




**5.** Note the removable 3/8" fitting on one side of the sidearm.



**6.** Unscrew the 3/8" fitting to reveal the 1/4" thread.

# Setup

## Mounting Sidearm onto Manfrotto Tripod

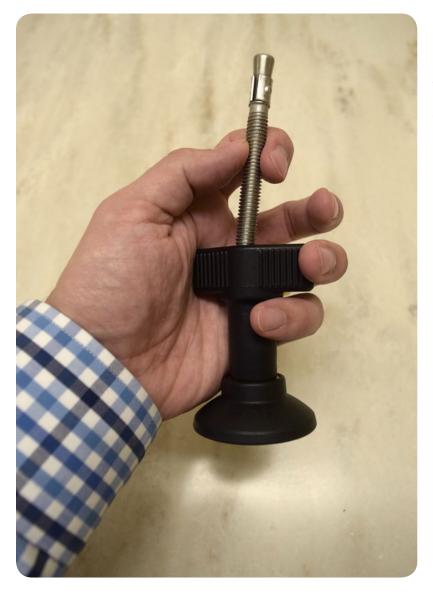

7. Insert the 3/8" thread bolt from the side arm package into the tightening handle from the Manfrotto tripod.



**8.** Screw the thread bolt all the way so that it protrudes from the bottom.

# Assembly

#### Mounting Sidearm onto Manfrotto Tripod



**9.** Set the sidearm onto the tripod and screw in the tightening handle from the bottom.



**10.** Turn the sidearm to the desired location before tightening all the way.



**11.** Screw the camera or video camera directly onto the 1/4" thread.

### Mounting Sidearm onto Manfrotto Tripod



**12.** Turn the lever on the sidearm to loosen the pole



**13.** Turn the pole to the desired angle and then tighten the lever.

Please remember to return all pieces back to place. Pay special attention to the 3/8" thread bolt and the 3/8" fitting.